

# Installing the Driver of The Printer

- 1. Access the website www.fametech.com.tw and download the driver.
- 2. Double click the icon "PRPDRVEN.EXE" to initiate the installation.







## 4. Select the proper Printer Model Number .

💑 Detail Setting (x	86/x64)			×
			7	
Install Module	PRP-058II Series	s <u>*</u>		
	PRP-058II Series			
	PRP-058E Series			
Frinter Setting-	PRP-058C Series			
✓ Set Default	PRP-058C1 Series			
	PRP-058K Series			
Printer Vene	PRP-076 Series			
Trincer Name	PRP-076D Series			
	PKP-08011 Series			
	PRP-085111 Series	_		
	PRP-0851119 Serie	2		
	PRP-100			
	PPP-OFO Coming			
	PPP-200 Series			
	PRP-350 Series			
	PRP-650 Series			
	PRP-950 Series			
	IN 550 Series	•		
		< <u>B</u> ack	<u>N</u> ext >	<u>E</u> xit
This Driver is suitable for Windows x86 and x64 OS.				

5. Printer Interface Setting: Select the communication interface (COM port number or USB port). Click "Install" to complete the installation.

# Select Port (x86/x64)

JSB001	Virtual printer port for USB
.92. 168. 100. 82	Standard TUP/IP Port
P_192.168.1.100	Standard TCP/IP Port
P_192. 168. 123. 100	Standard TCP/IP Port
P_192.168.123.99	Standard TCP/IP Port
:OM2:	Local Port
COM3:	Local Port
COM4:	Local Port
ILE:	Local Port
	Create Port Configure Port.

## ort Setting

Remember to access the properties of your printer (Start>>Printers and Faxes>> and double-click the icon to enter).

	PRP-058	
0	0	
	Ready	

💐 PRP-058				
Printer Document View H	elp			
Connect	Status	Owner	Pages Size	Subr
<ul> <li>Set As Default Printer</li> <li>Printing Preferences</li> </ul>				
Pause Printing Cancel All Documents				
Sharing				>
Properties	rinter.			
Close				

### $\mathbf{?}\mathbf{X}$ PRP-058 Properties General Sharing Ports Advanced Device Settings 0 PRP-058 Print to the following port(s). Documents will print to the first free checked port. Port Description Printer ~ LPT1: Printer Port LPT2: Printer Port LPT3: Printer Port COM1: Serial Port COM2: Serial Port PBP-059 COM3: Serial Port

Delete Port

0K

Configure Port...

Apply

Cancel

### DIP ON OFF Function SW-1 Paper Cutter No Yes Audio Alarm (Beeper) Yes No SW-2 Print Density Dark Light SW-3 Two-byte Character Code No Yes SW-4 SW-5 Black Mark Yes No SW-6 Reserved --------

## **Baud Rate Setting**

SW-7	SW-8	Baud Rate
ON	ON	38400
OFF	ON	115200
ON	OFF	9600
OFF	OFF	19200

7 Port	Setting.	

COM4: Serial Port Add Port...

Enable bidirectional support Enable printer pooling

Make sure the port of printer is correctly configured.

# െ ON

**DIP Switches** 

Protective Cover

# DIP Switch Configuration

To change the setting of the printer manually:

- 1. Turn off the printer.
- 2. Loosen the securing screw of the protective cover .
- 3. Remove the Protective Cover.
- 4. Adjust the DIP switches to configure the printer.